


Removal

- 1 Remove spare wheel and plastic cover rail for vent lines (2).
- 2 Pull vent lines (2) out of connecting hoses (4).
- 3 Remove fuel expansion tank (1) complete with positive and negative vent line.

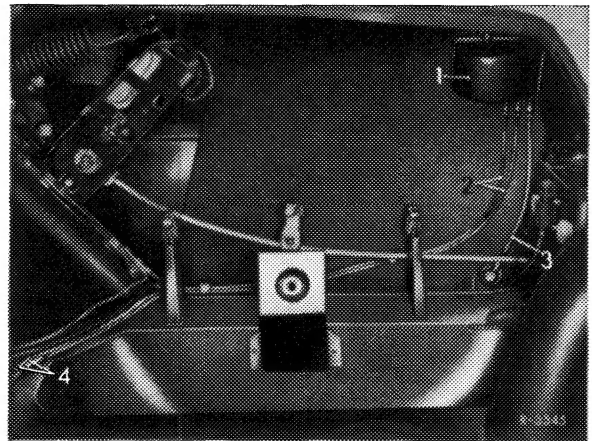

- | | |
|------------------------------------|------------------------------------|
| 1 Fuel expansion tank | 3 Negative vent line to atmosphere |
| 2 Positive vent lines to fuel tank | 4 Connecting hoses |

Installation

- 4 For installation proceed vice versa.

Attencion!

Avoid sharp bends in positive and negative vent lines during installation.